

100


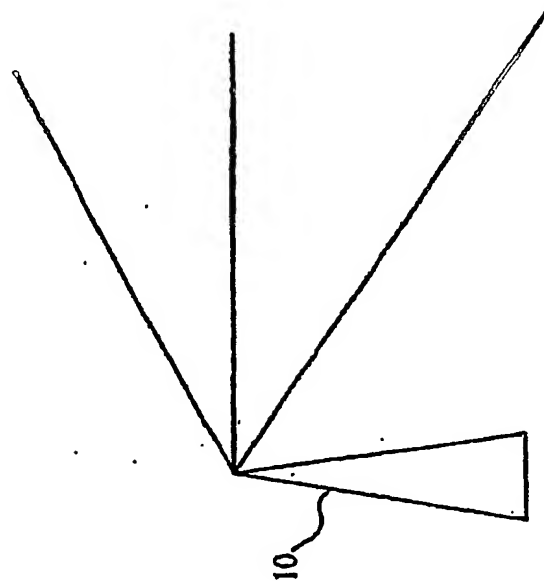 


FIG. 1

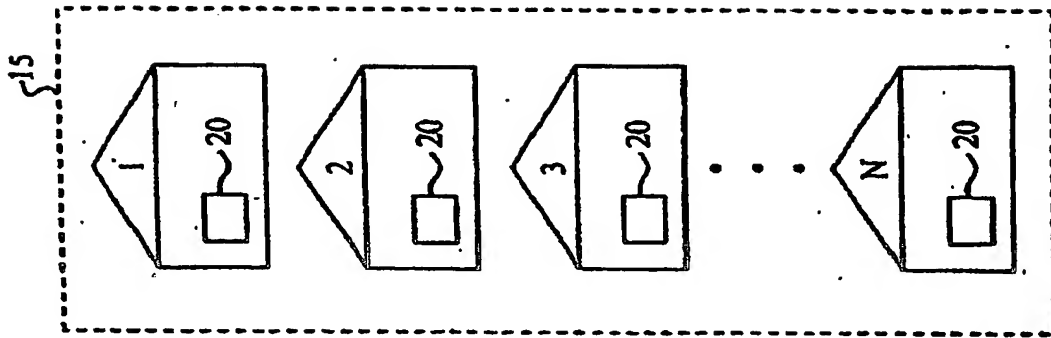 

2 / 12

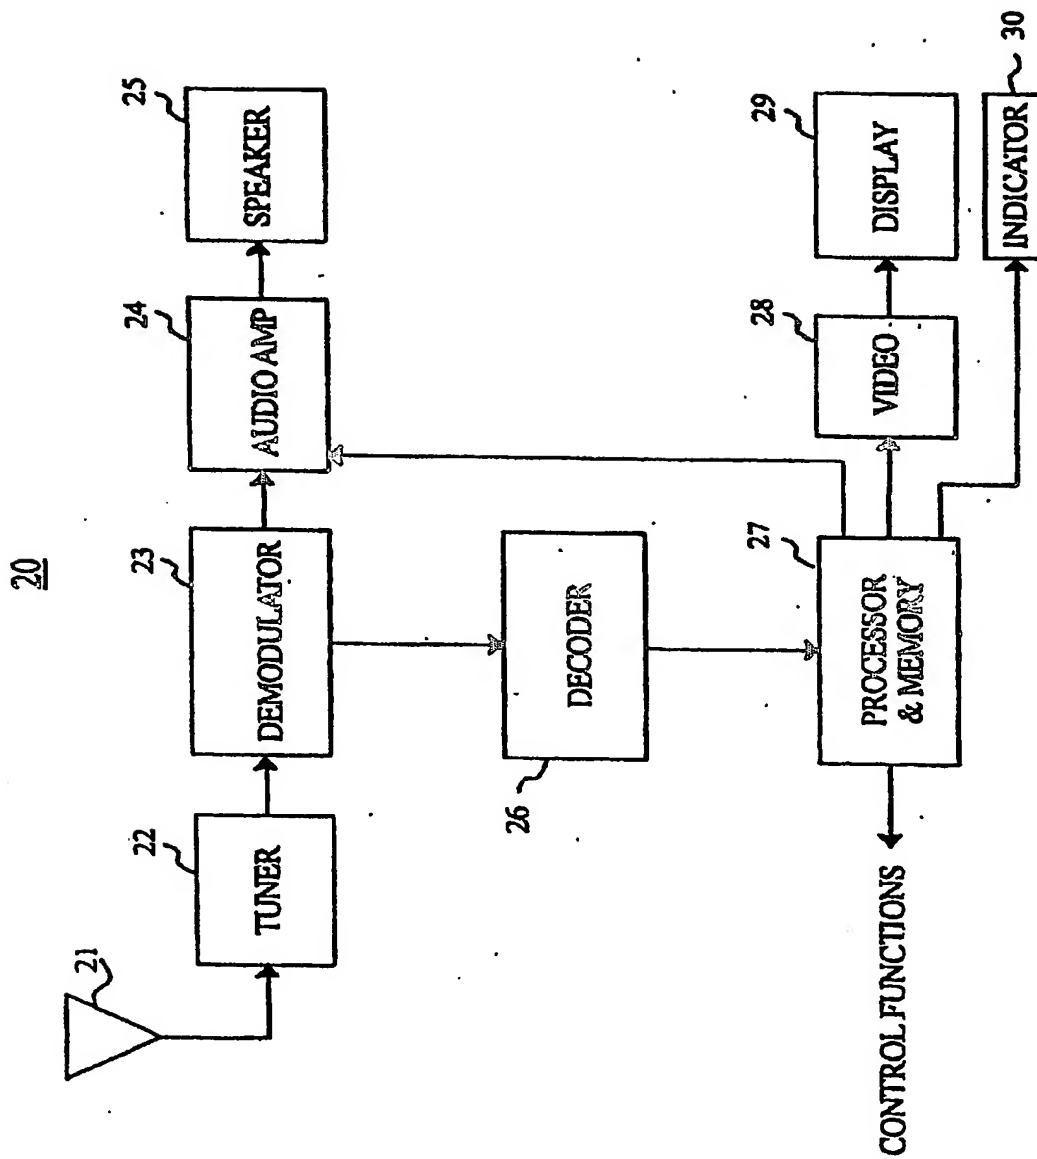 


FIG. 2

3 / 12

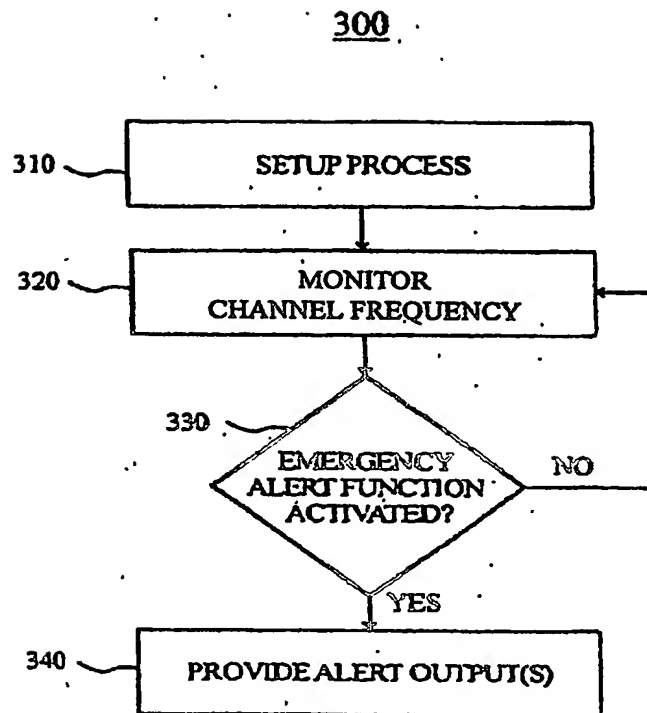 


FIG. 3

20

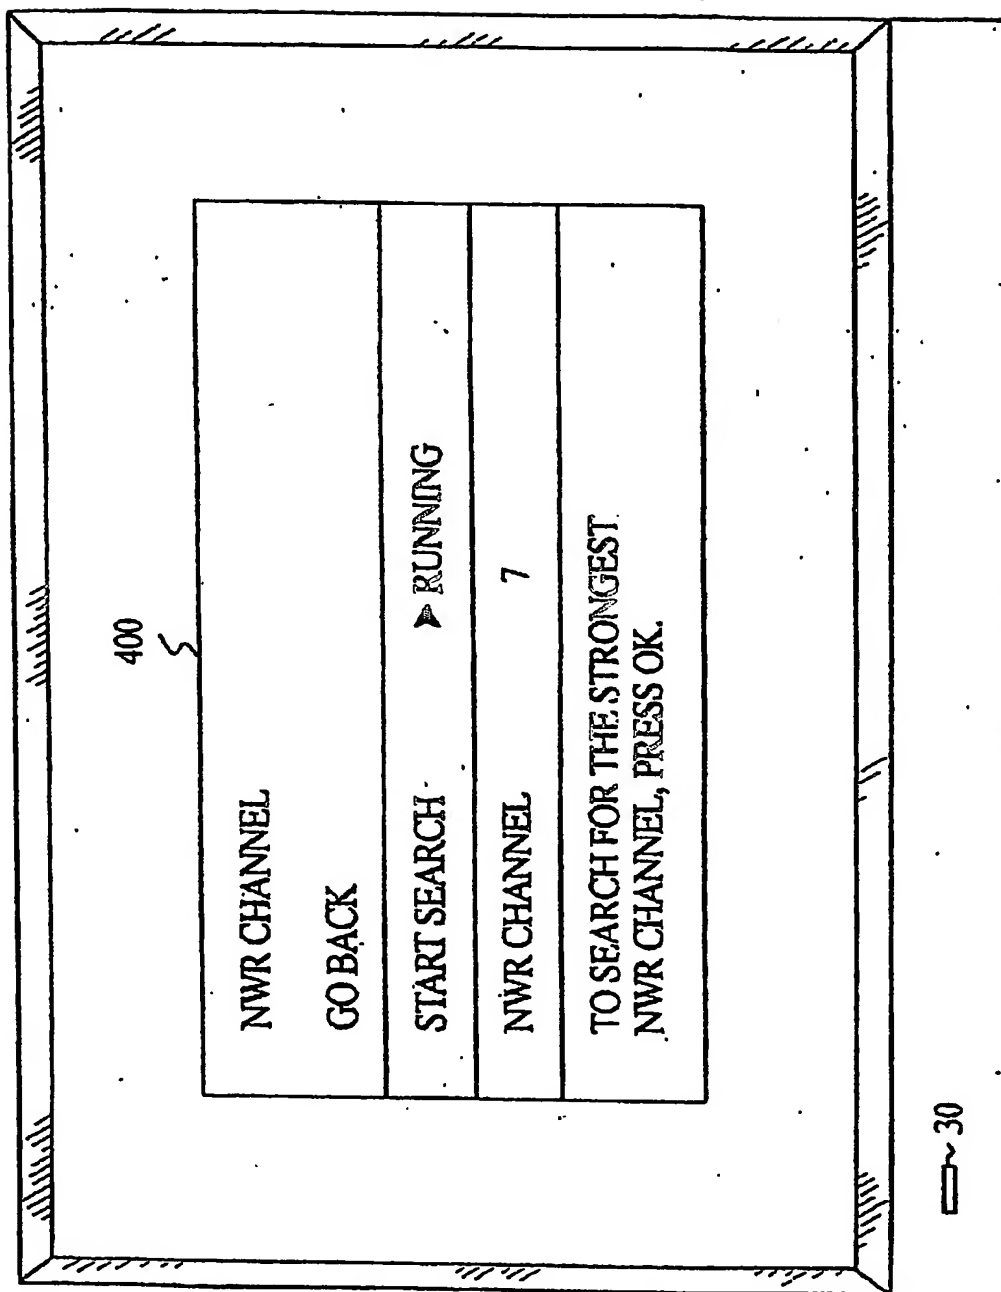 


FIG. 4

5 / 12

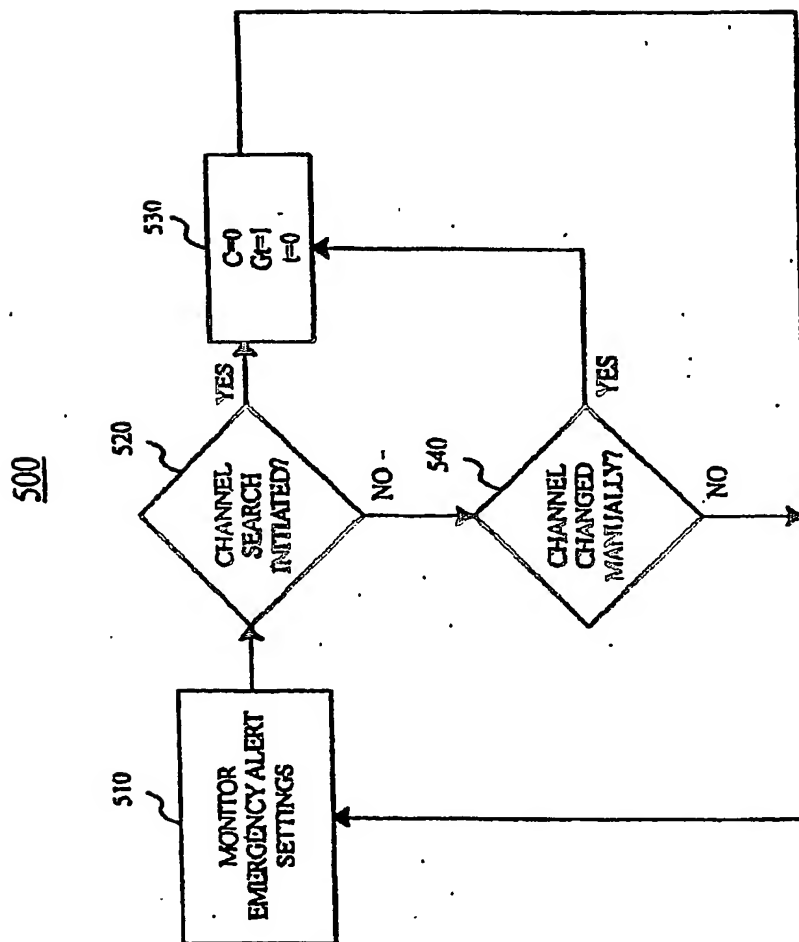 


FIG. 5

6 / 12

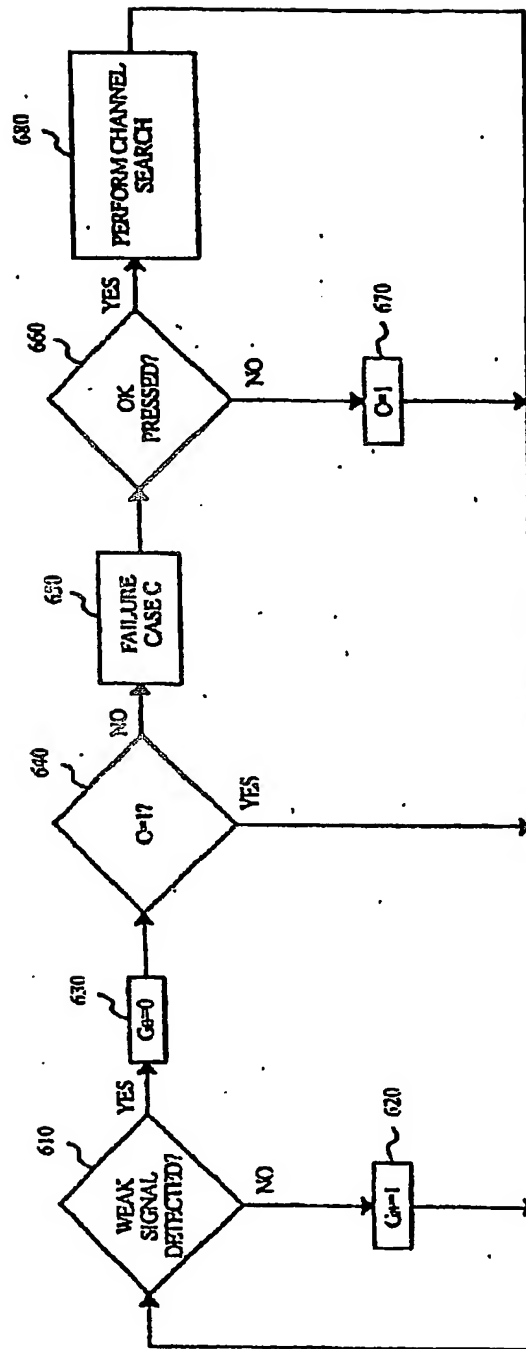 
600

FIG. 6

7 / 12

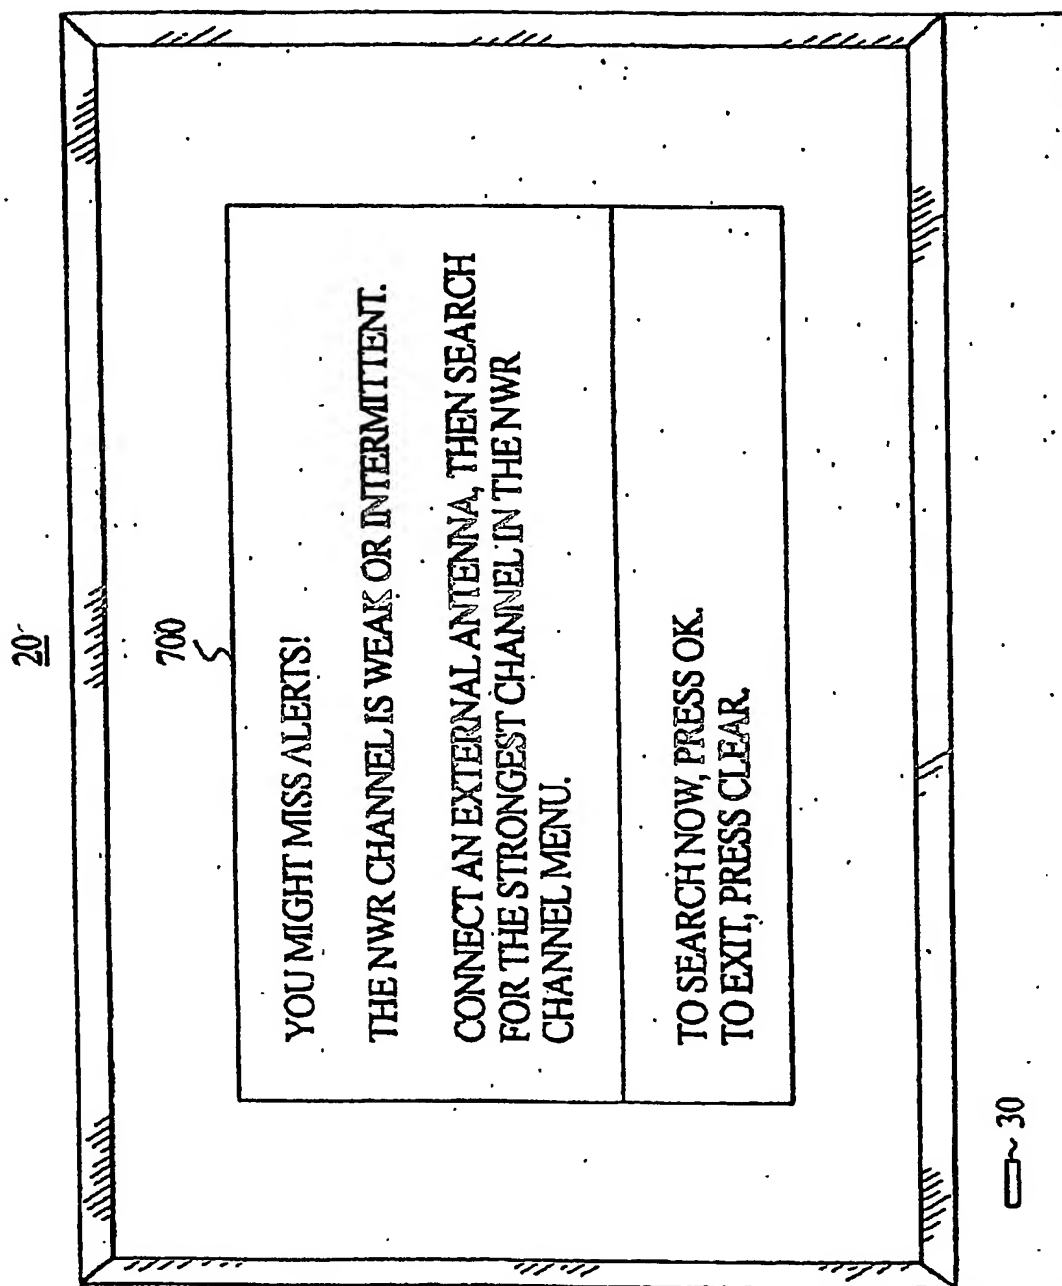 


FIG. 7

800

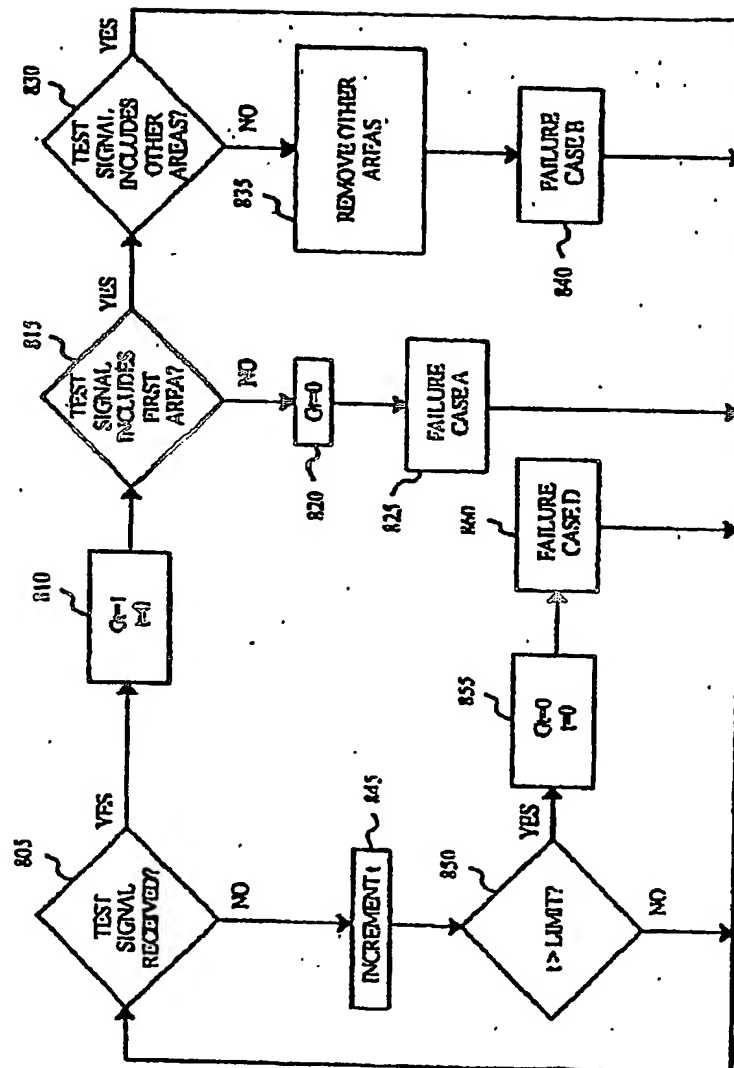 


FIG. 8

9 / 12

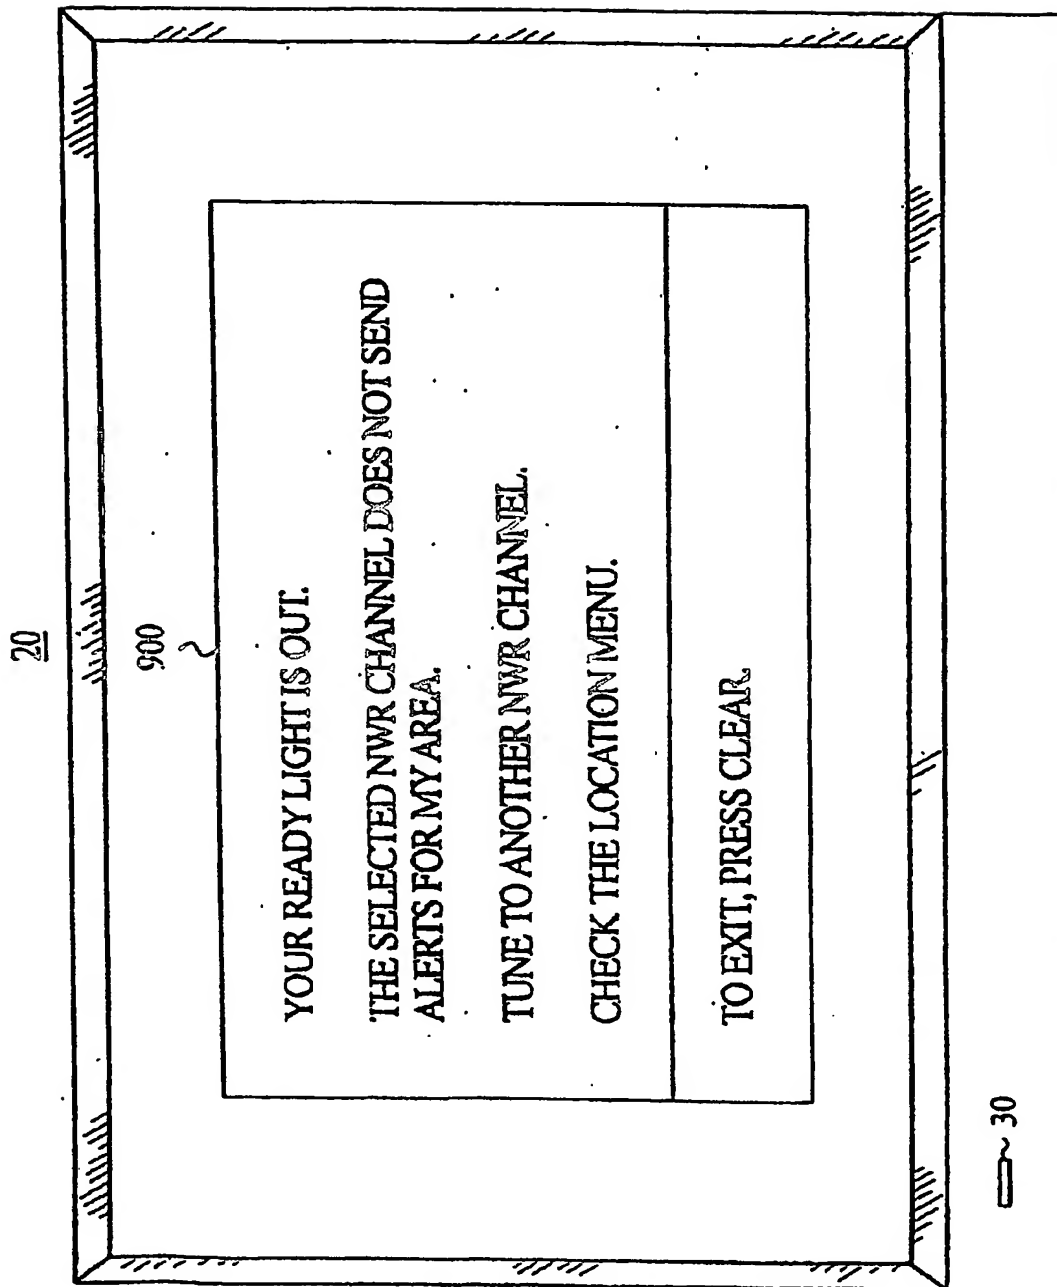 


FIG. 9

10 / 12

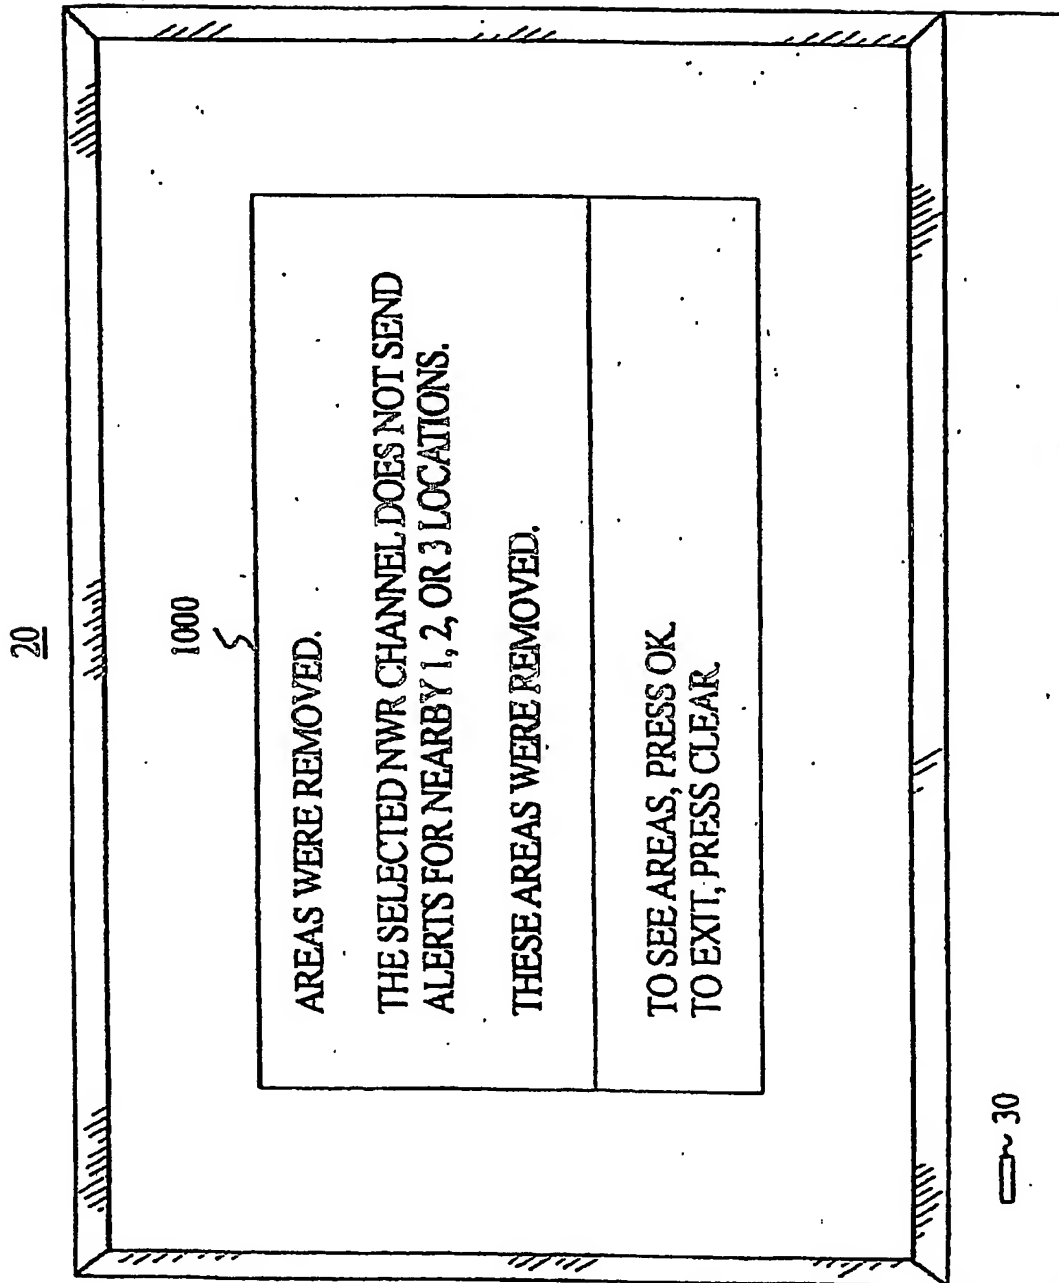 


FIG. 10

11 / 12

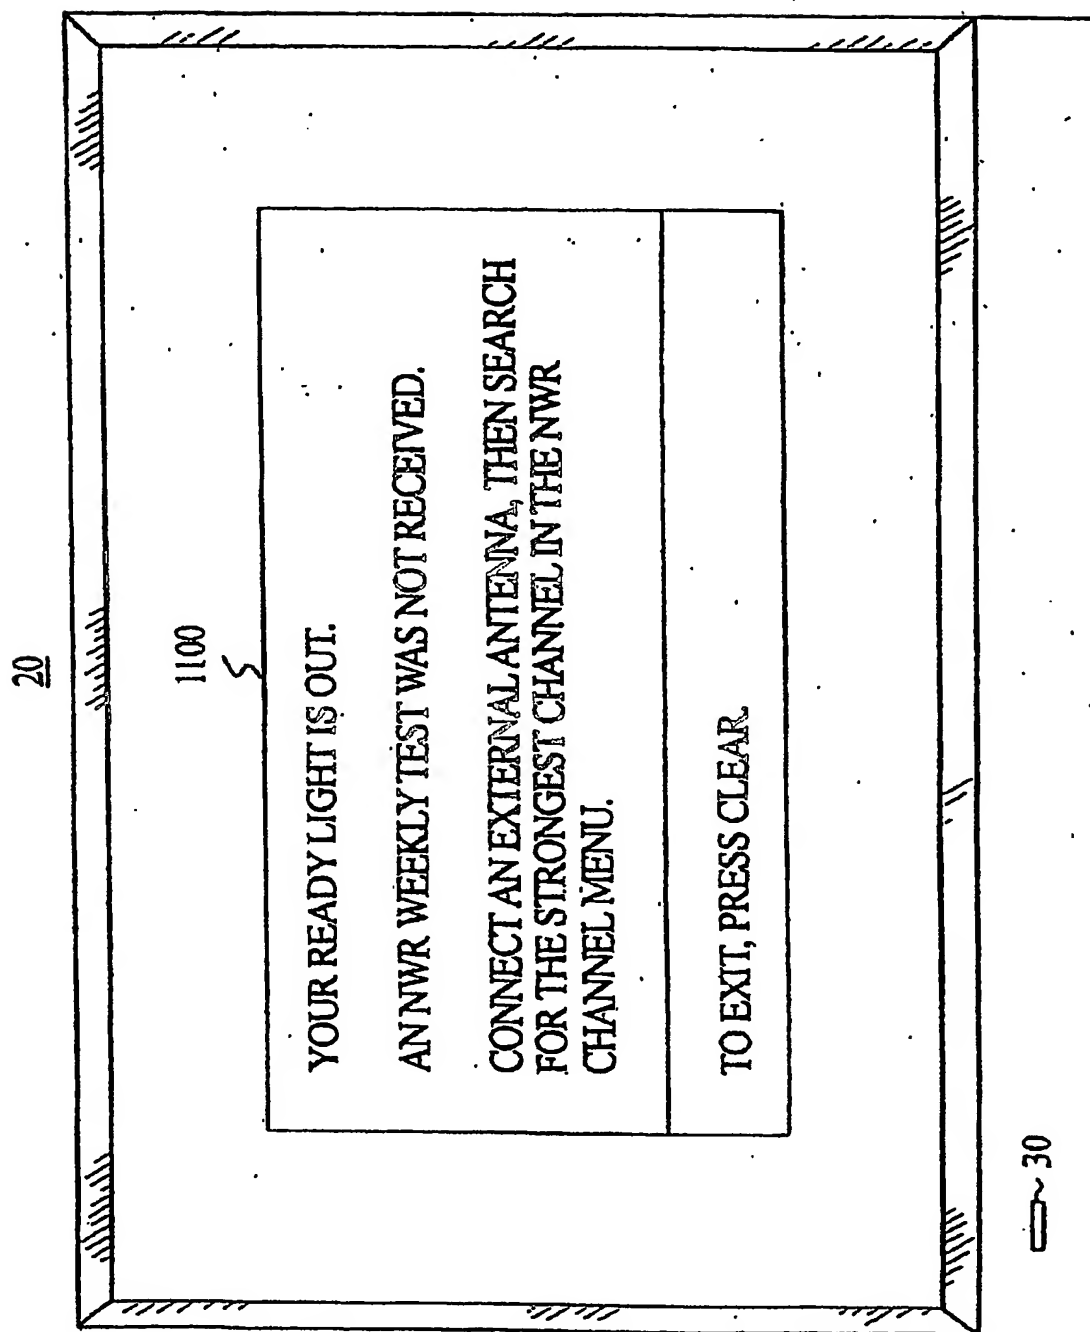 


FIG. 11

12 / 12

20

1200



 
POWER WAS INTERRUPTED.

ALERTS MAY HAVE BEEN ISSUED DURING THE
POWER OUTAGE.

PRESS THE HEAR VOICE KEY FOR MISSED ALERTS.

IF YOU MOVED THE TV, UPDATE AREAS IN THE
LOCATION MENU.

TO SEE AREAS, PRESS OK.
TO EXIT, PRESS CLEAR.



30

FIG. 12